


© Copyright 2018

## RWM Inc.

6419 South Cottonwood Street, Murray, Utah 84107  
 Phone: 801-268-2400 Toll Free: 1-855-RWM-ARTS (796-2787)  
 Fax: 801-268-2522 E-mail: info@rwm-inc.com

Visit our website at [www.rwm-inc.com](http://www.rwm-inc.com)

### Acanthus Leaf Lightcove: For Select Larger Domes

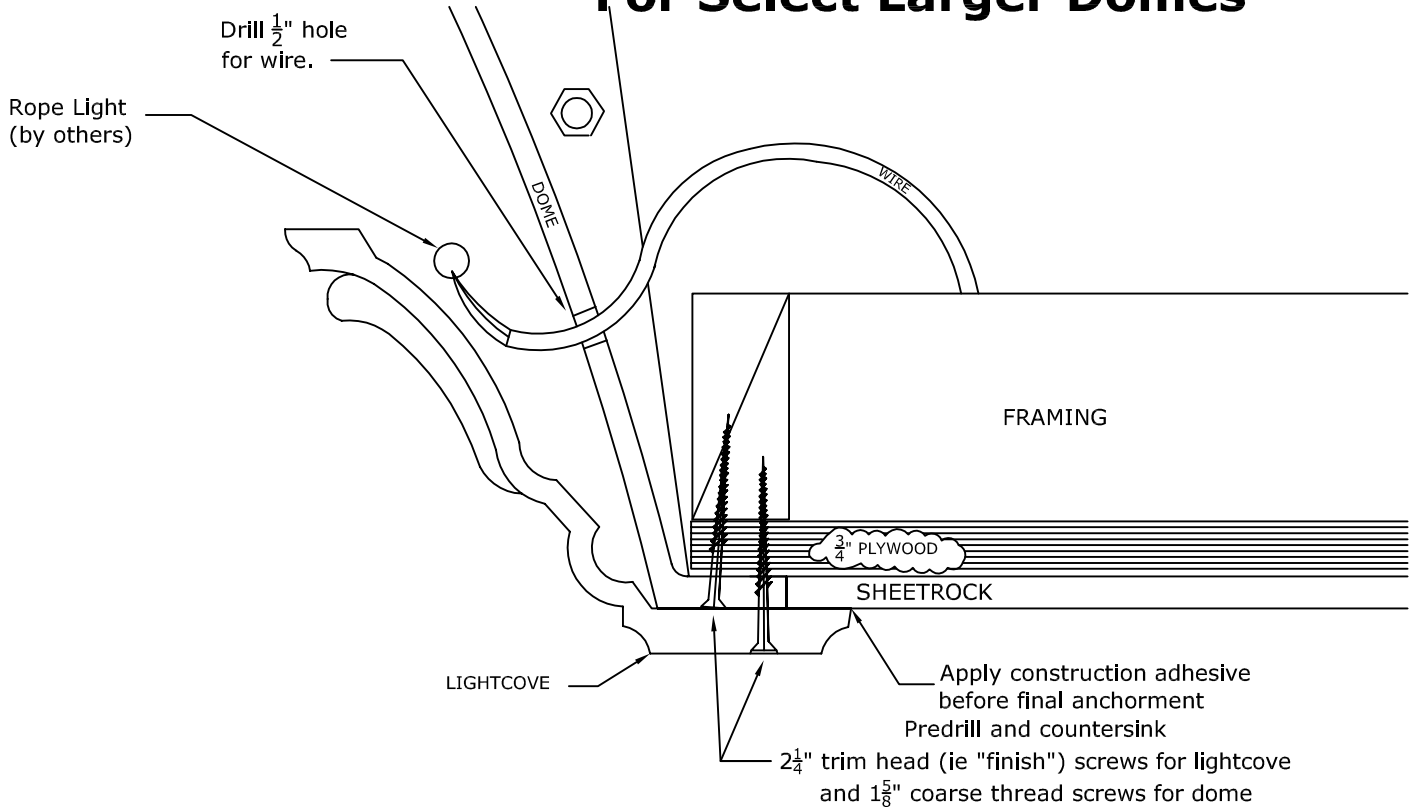

We recommend a minimum of one point of anchor every 16" on lightcove. This is in addition to a minimum of one point of anchor every 16" for the dome bottom flange, and the recommended minimum of tie wire attachments for the dome.  
 Check the spec sheet for your dome.

