


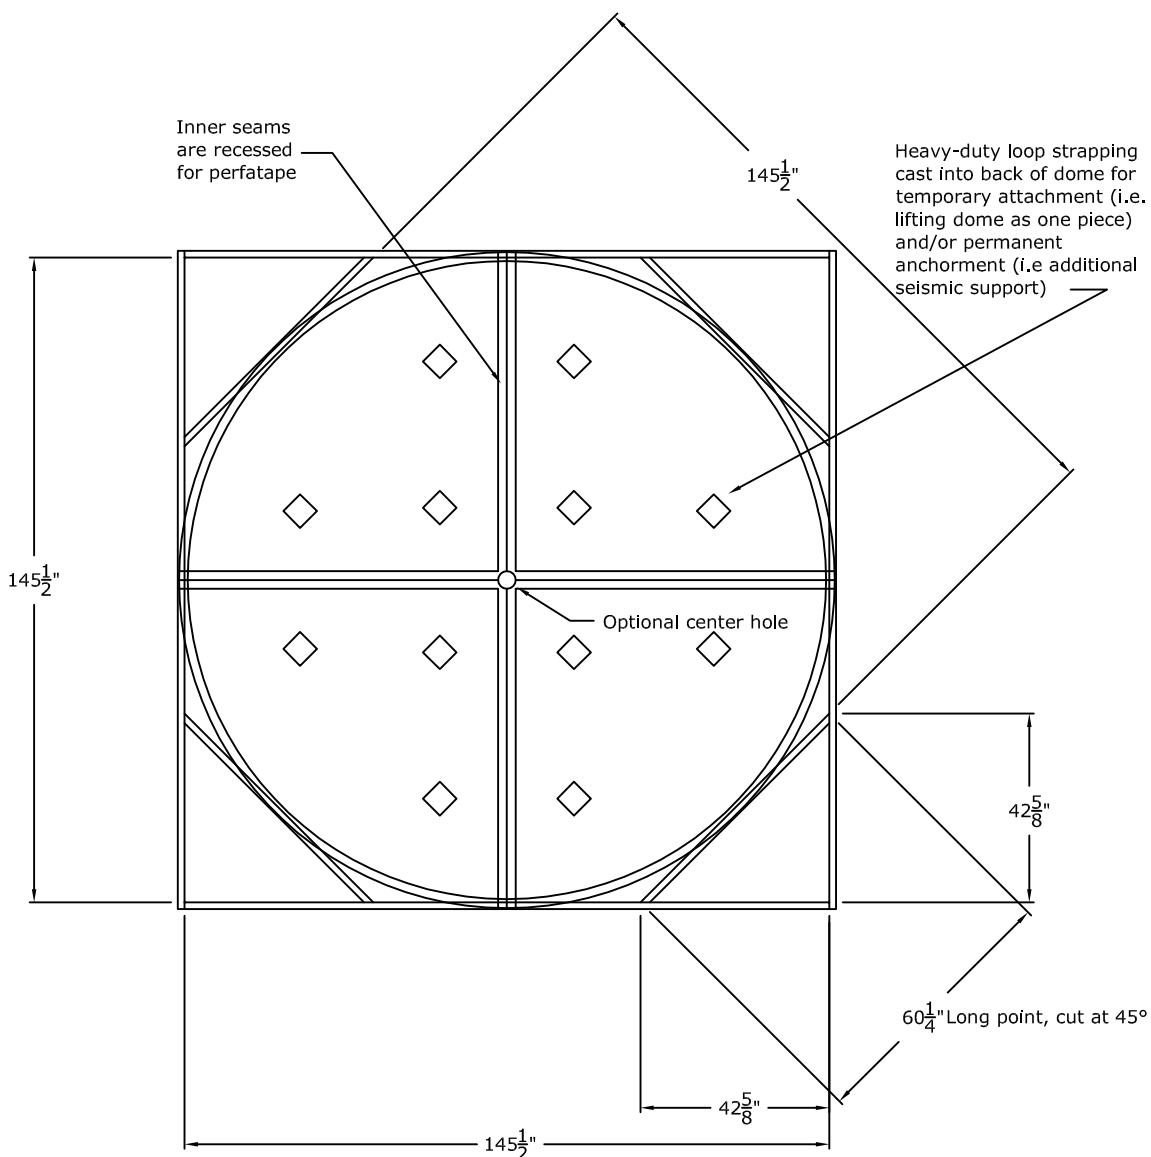


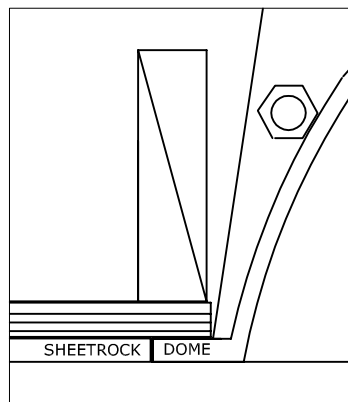

6419 South Cottonwood Street, Murray, Utah 84107
Phone: 801-268-2400 Toll Free: 1-855-RWM-ARTS (796-2787)
Fax: 801-268-2522 E-mail: info@rwm-inc.com
Visit our website at www.rwm-inc.com

12' Round Recessed Dome: 4 Parts with a 34" Overall Rise

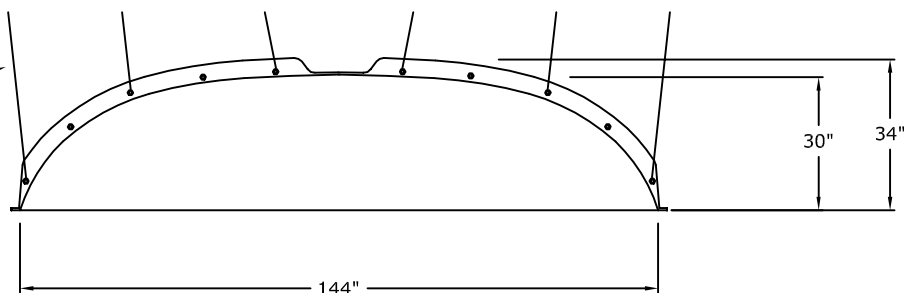

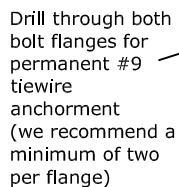

© Copyright 2018



RWM Inc.

6419 South Cottonwood Street, Murray, Utah 84107
 Phone: 801-268-2400 Toll Free: 1-855-RWM-ARTS (796-2787)
 Fax: 801-268-2522 E-mail: info@rwm-inc.com

Visit our website at www.rwm-inc.com

12' Coffered Round Recessed Dome: 4 Parts with a 34" Overall Rise (16 Panels)


Drill through both
 bolt flanges for
 permanent #9
 tiewire
 anchorment
 (we recommend a
 minimum of two
 per flange)

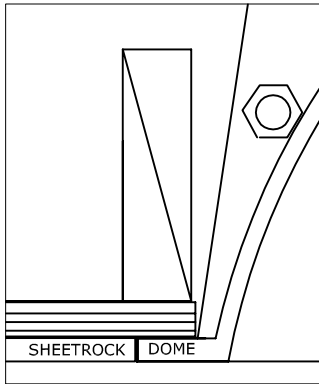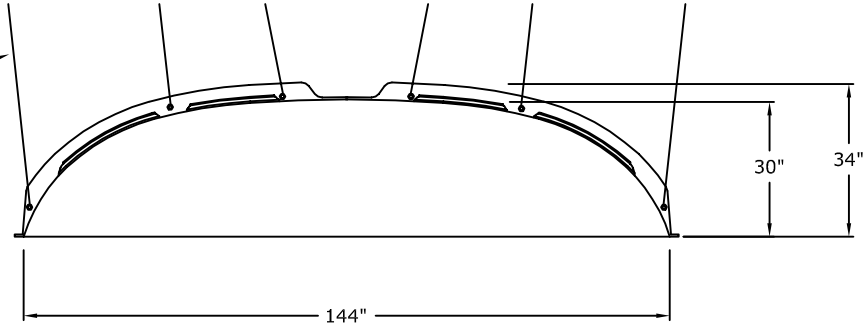

Inner seams
 are recessed
 for perfatape

145 $\frac{1}{2}$ "

Heavy-duty loop strapping
 cast into back of dome for
 temporary attachment (i.e.
 lifting dome as one piece)
 and/or permanent
 anchorment (i.e additional
 seismic support)

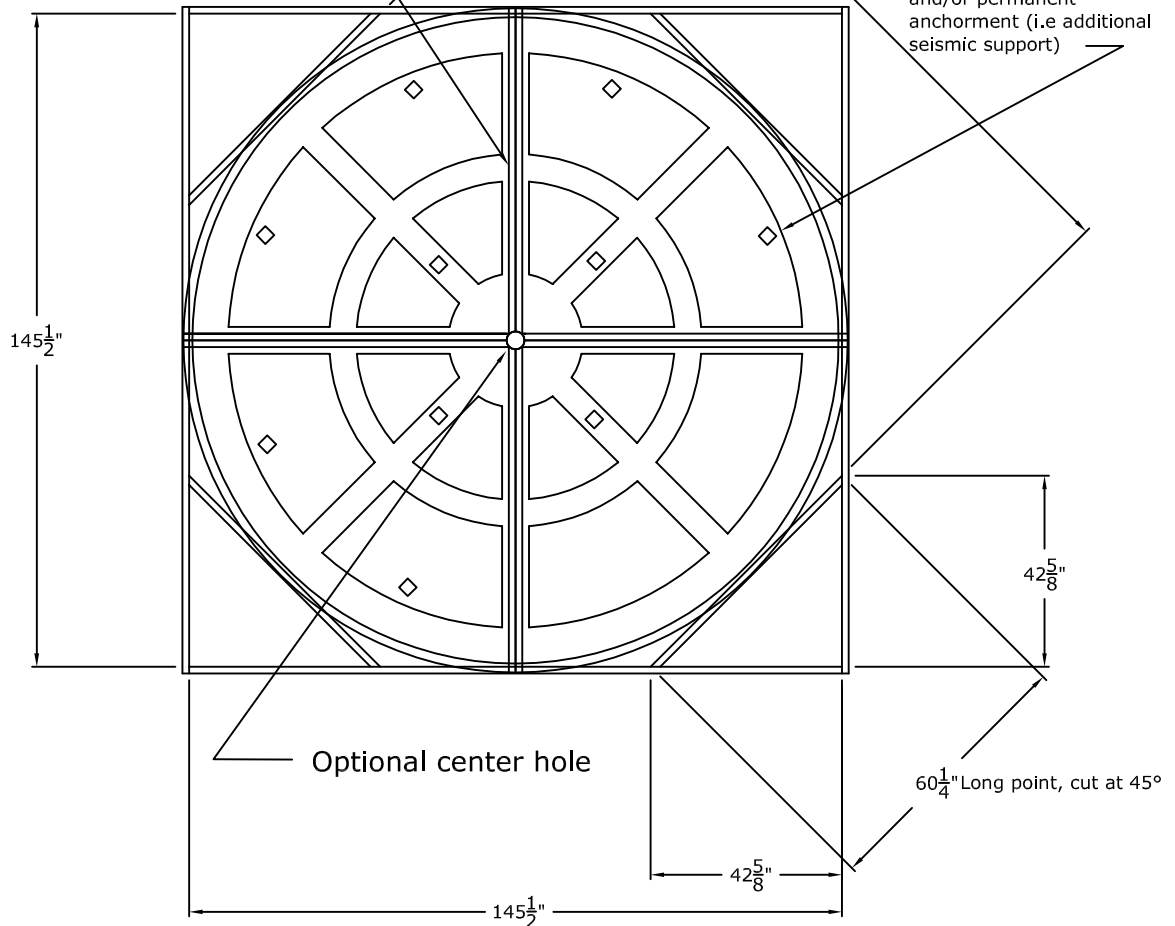

Optional center hole

60 $\frac{1}{4}$ " Long point, cut at 45°



© Copyright 2024

RWM Inc.

6419 South Cottonwood Street, Murray, Utah 84107


Phone: 801-268-2400 Fax: 801-268-2522

E-mail: info@rwm-inc.com

Visit our website at www.rwm-inc.com


12' Round Recessed Dome: 4 Parts with a $47\frac{5}{8}"$ Overall Rise


Drill through both
bolt flanges for
permanent #9
tiewire anchorment
(we recommend a
minimum of two per
flange)

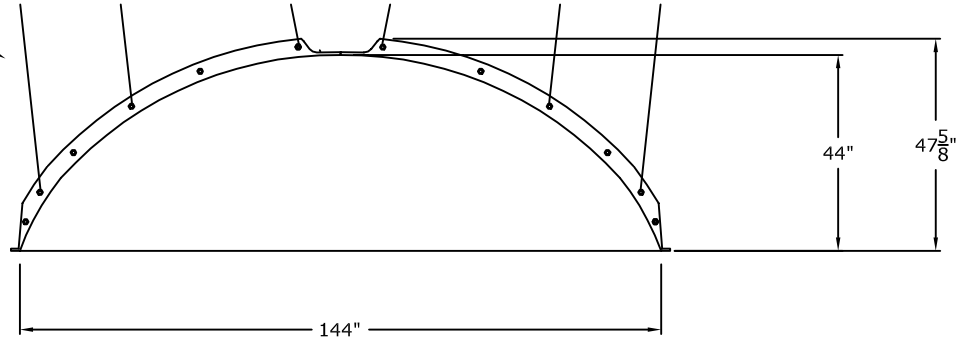

Inner seams
are recessed
for perfatape

Heavy-duty loop strapping cast
into back of dome for temporary
attachment (i.e. lifting dome as
one piece) and/or permanent
anchorment (i.e additional
seismic support)

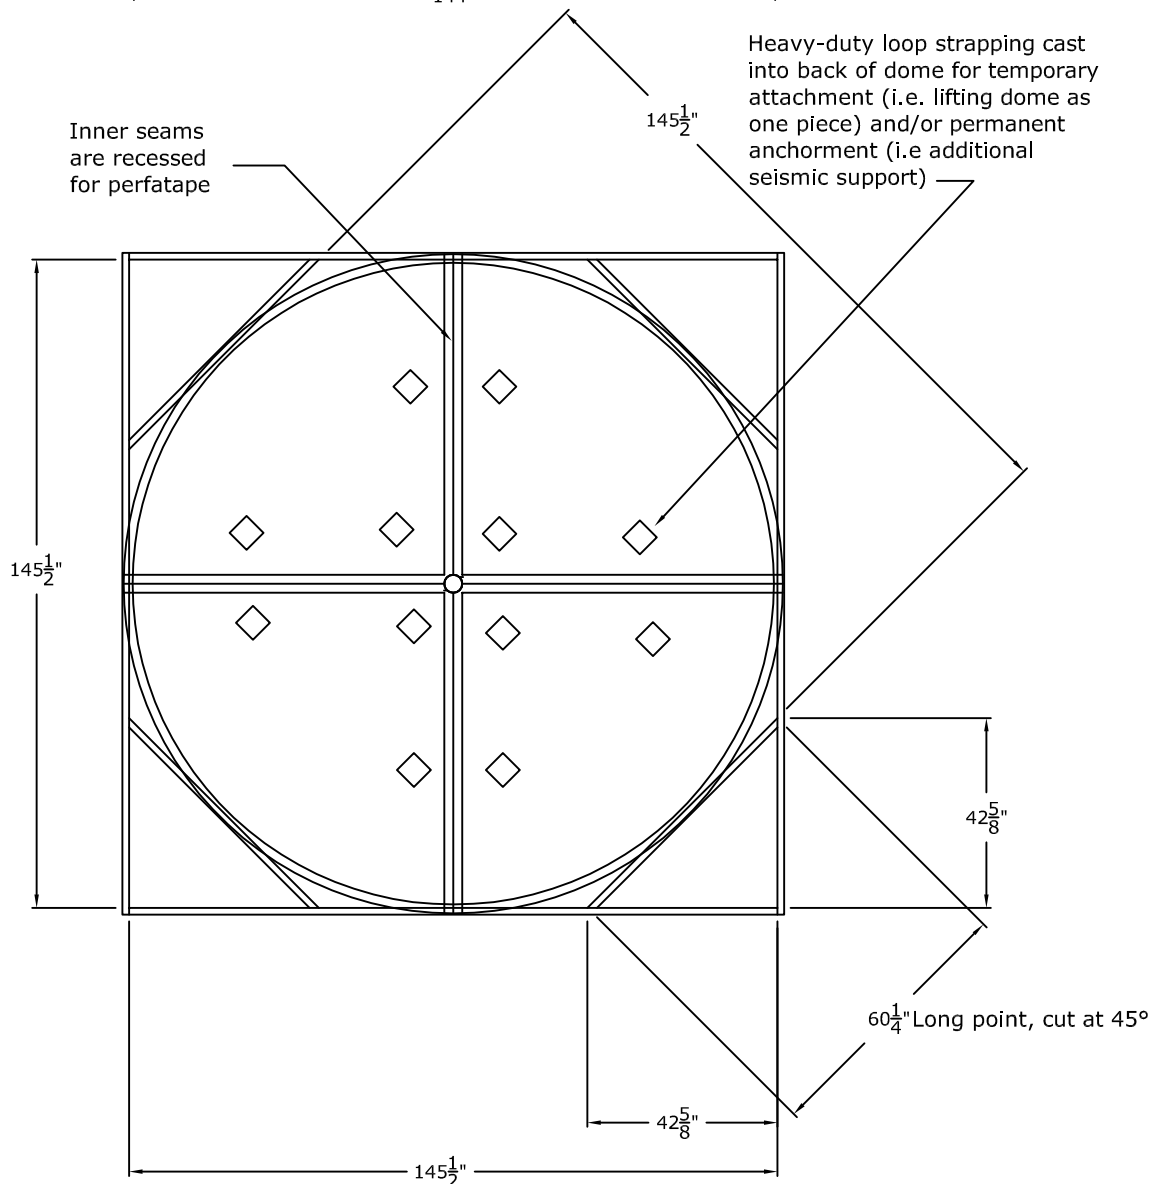

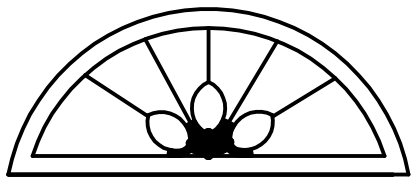

RWM[®]

© Copyright 2024

RWM Inc.

6419 South Cottonwood Street, Murray, Utah 84107


Phone: 801-268-2400 Fax: 801-268-2522

E-mail: info@rwm-inc.com


Visit our website at www.rwm-inc.com

12' Coffered Round Recessed Dome: 4 Parts with a $47\frac{5}{8}"$ Overall Rise (12 Panels)


Drill through both
bolt flanges for
permanent #9
tiewire
anchorments
(we recommend
a minimum of
two per flange)

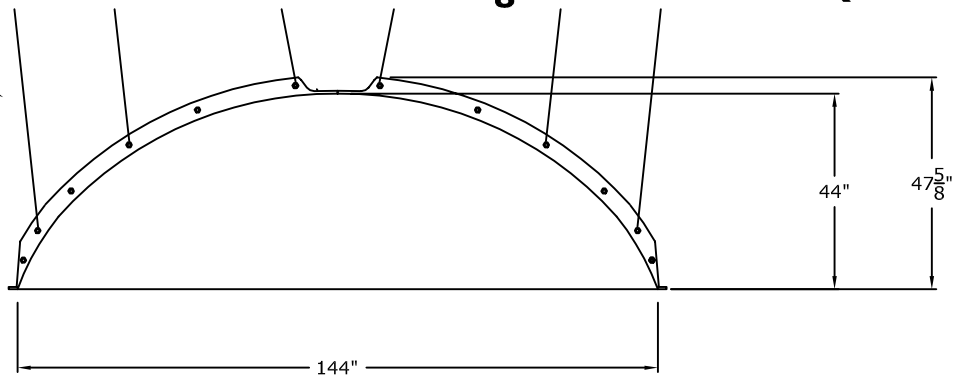

Inner seams
are recessed
for perfatape

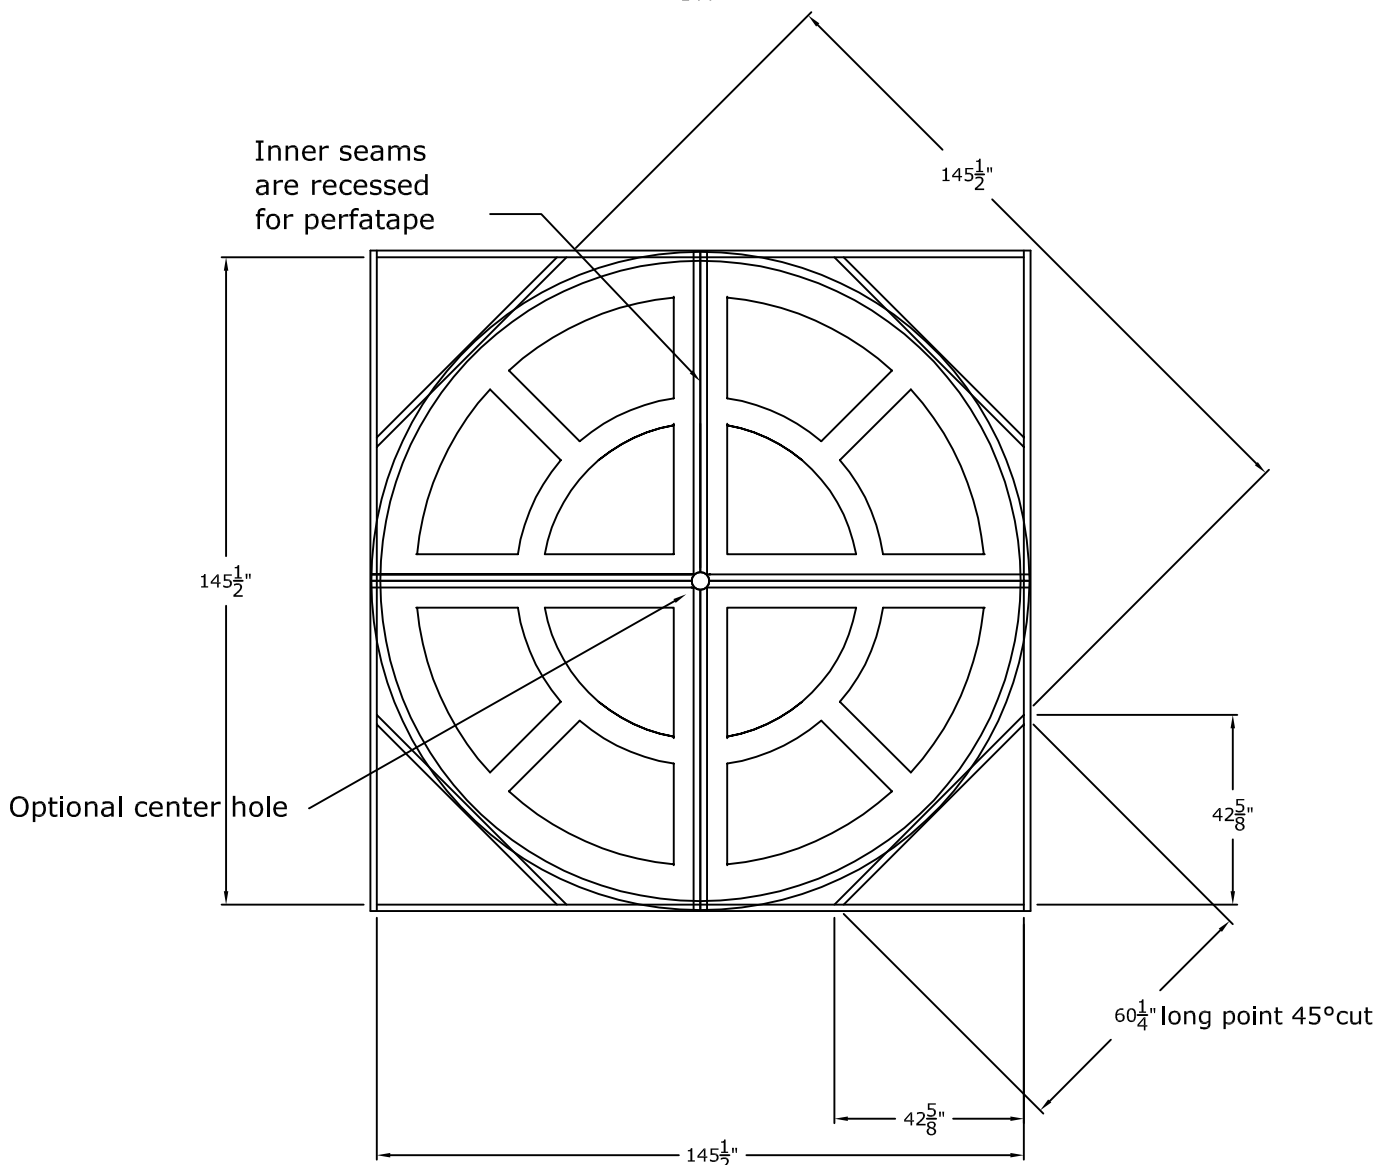

Note: We also add heavy duty loop strapping to the back of the dome for temporary tiewire attachment.

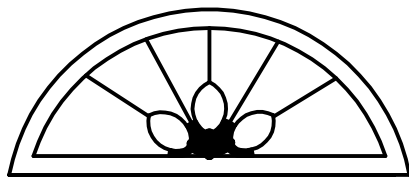

RWM[®]

RWM Inc.

6419 South Cottonwood Street, Murray, Utah 84107

Phone: 801-268-2400 Fax: 801-268-2522

E-mail: info@rwm-inc.com


Visit our website at www.rwm-inc.com

12' Coffered Round Recessed Dome:

© Copyright 2024

4 Parts with a $47\frac{5}{8}"$ Overall Rise (24 Panels)

Drill through both bolt flanges for permanent #9 tie wire anchorments (we recommend a minimum of two per flange)

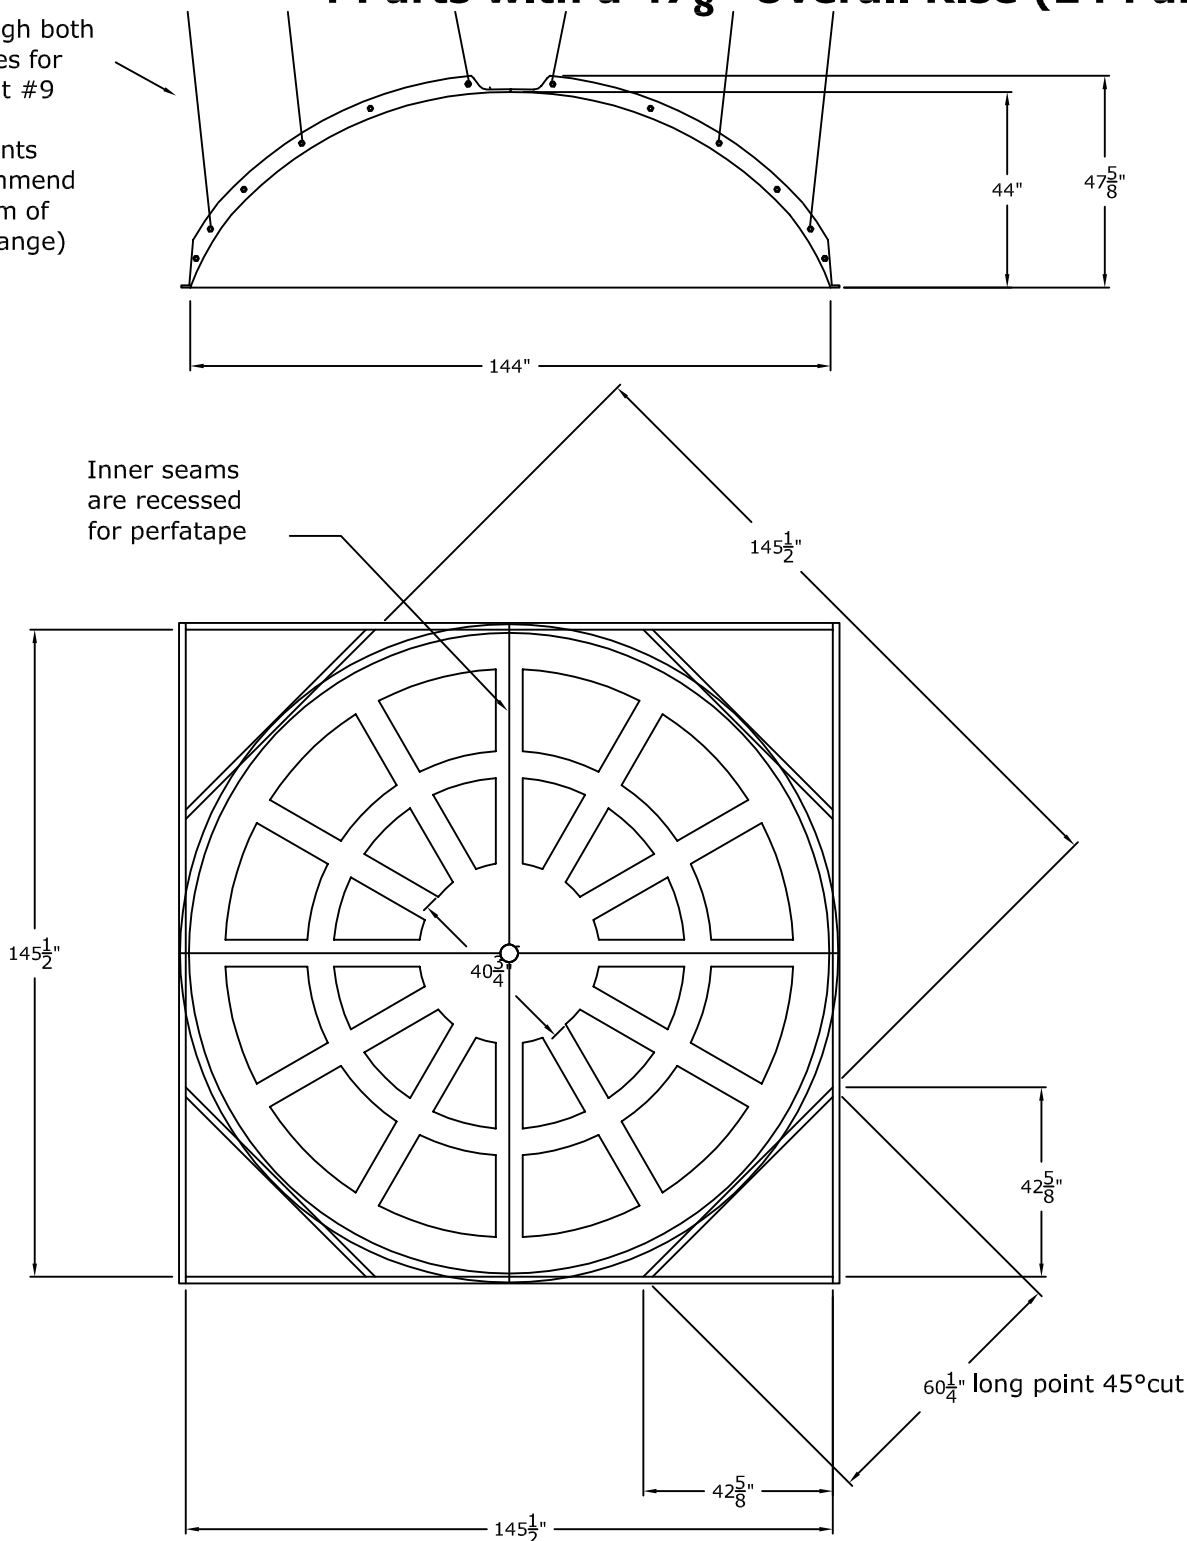

Note: We also add heavy duty loop strapping to the back of the dome for temporary tie wire attachment.





© Copyright 2018

RWM Inc.

6419 South Cottonwood Street, Murray, Utah 84107
Phone: 801-268-2400 Toll Free: 1-855-RWM-ARTS (796-2787)
Fax: 801-268-2522 E-mail: info@rwm-inc.com

Visit our website at www.rwm-inc.com

Bolt Flange Detail: Multi-Piece Domes

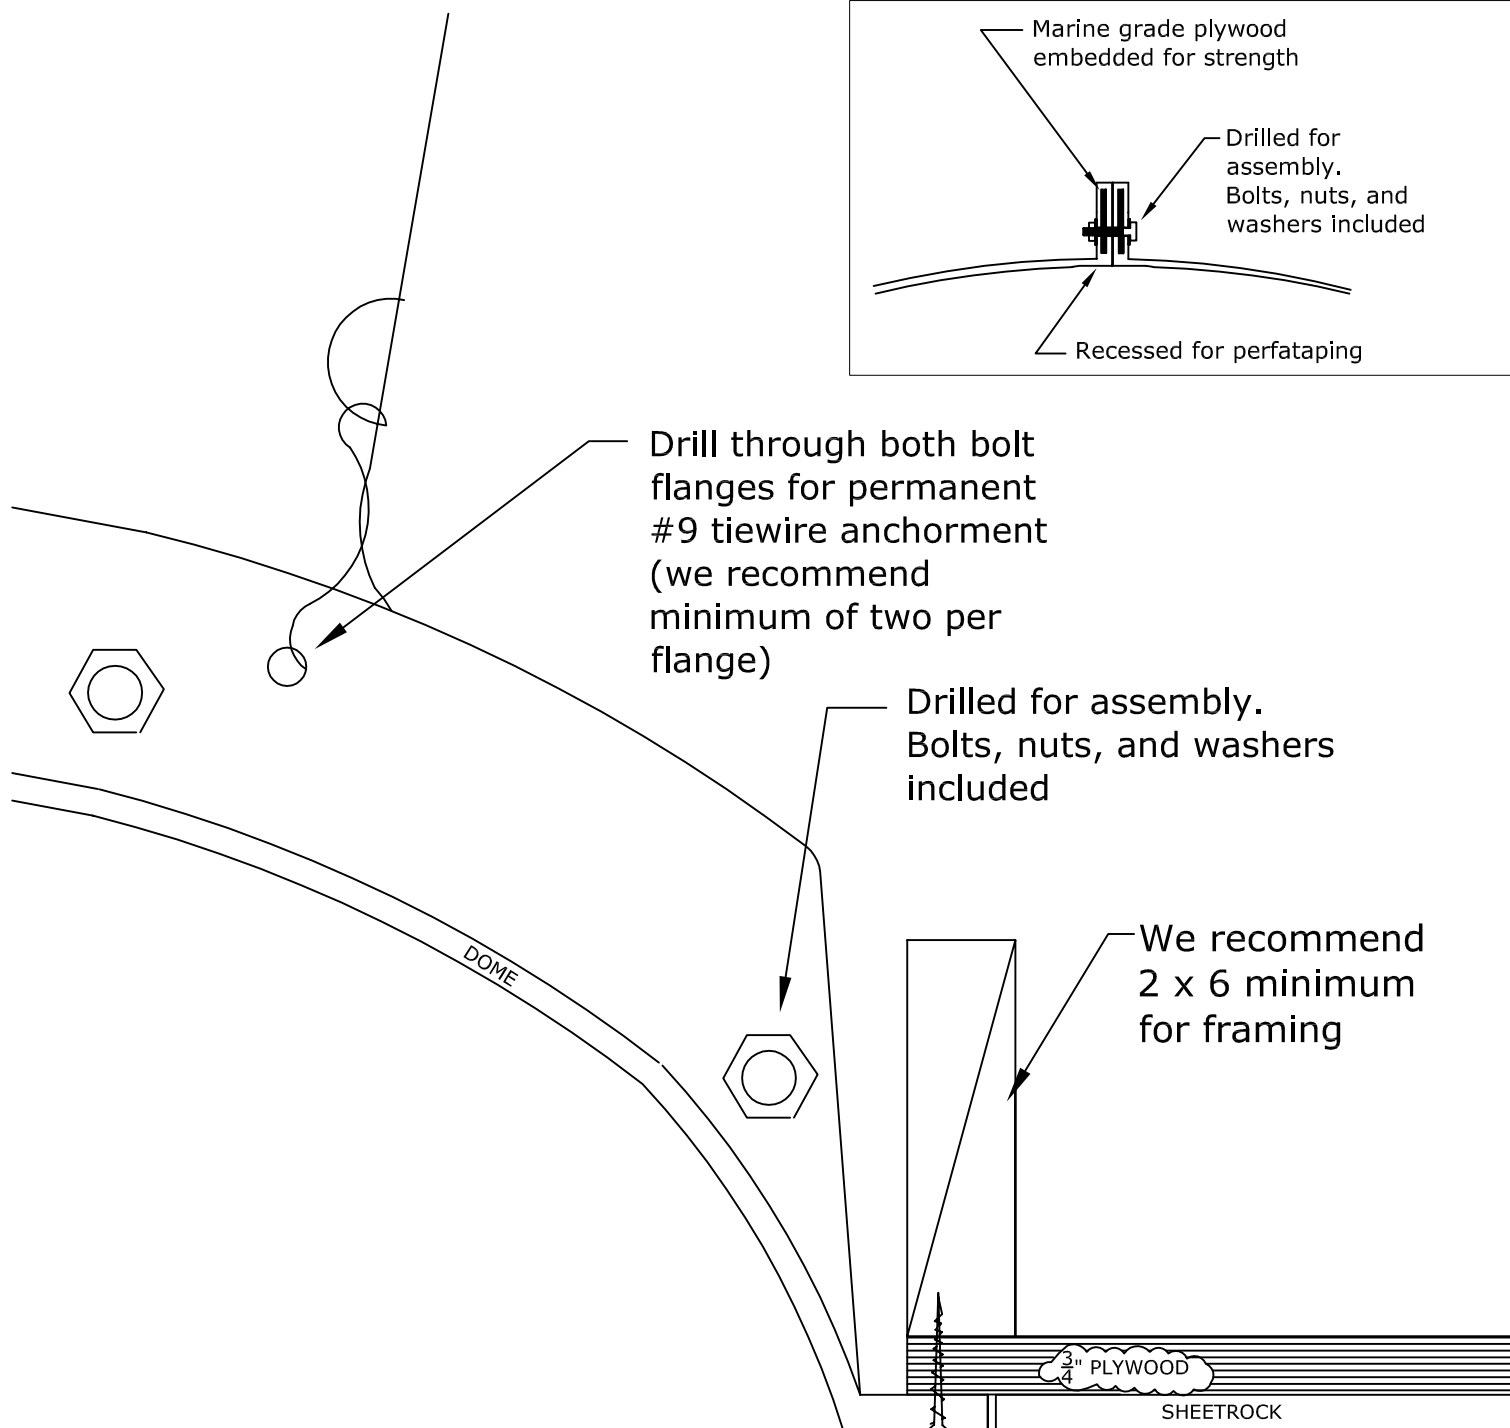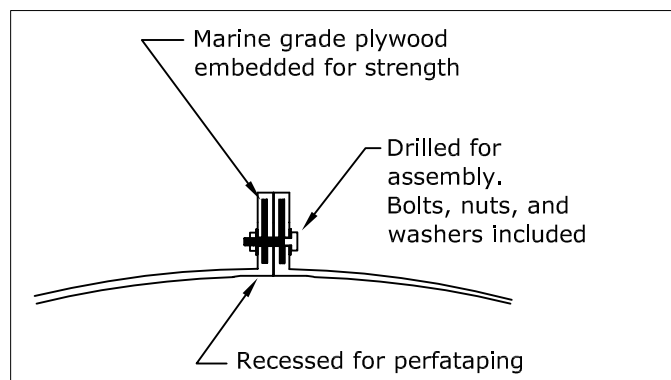




RWM Inc.

6419 South Cottonwood Street, Murray, Utah 84107
 Phone: 801-268-2400 Toll Free: 1-855-RWM-ARTS (796-2787)
 Fax: 801-268-2522 E-mail: info@rwm-inc.com

Visit our website at www.rwm-inc.com

Traditional Lightcove: For Select Larger Domes

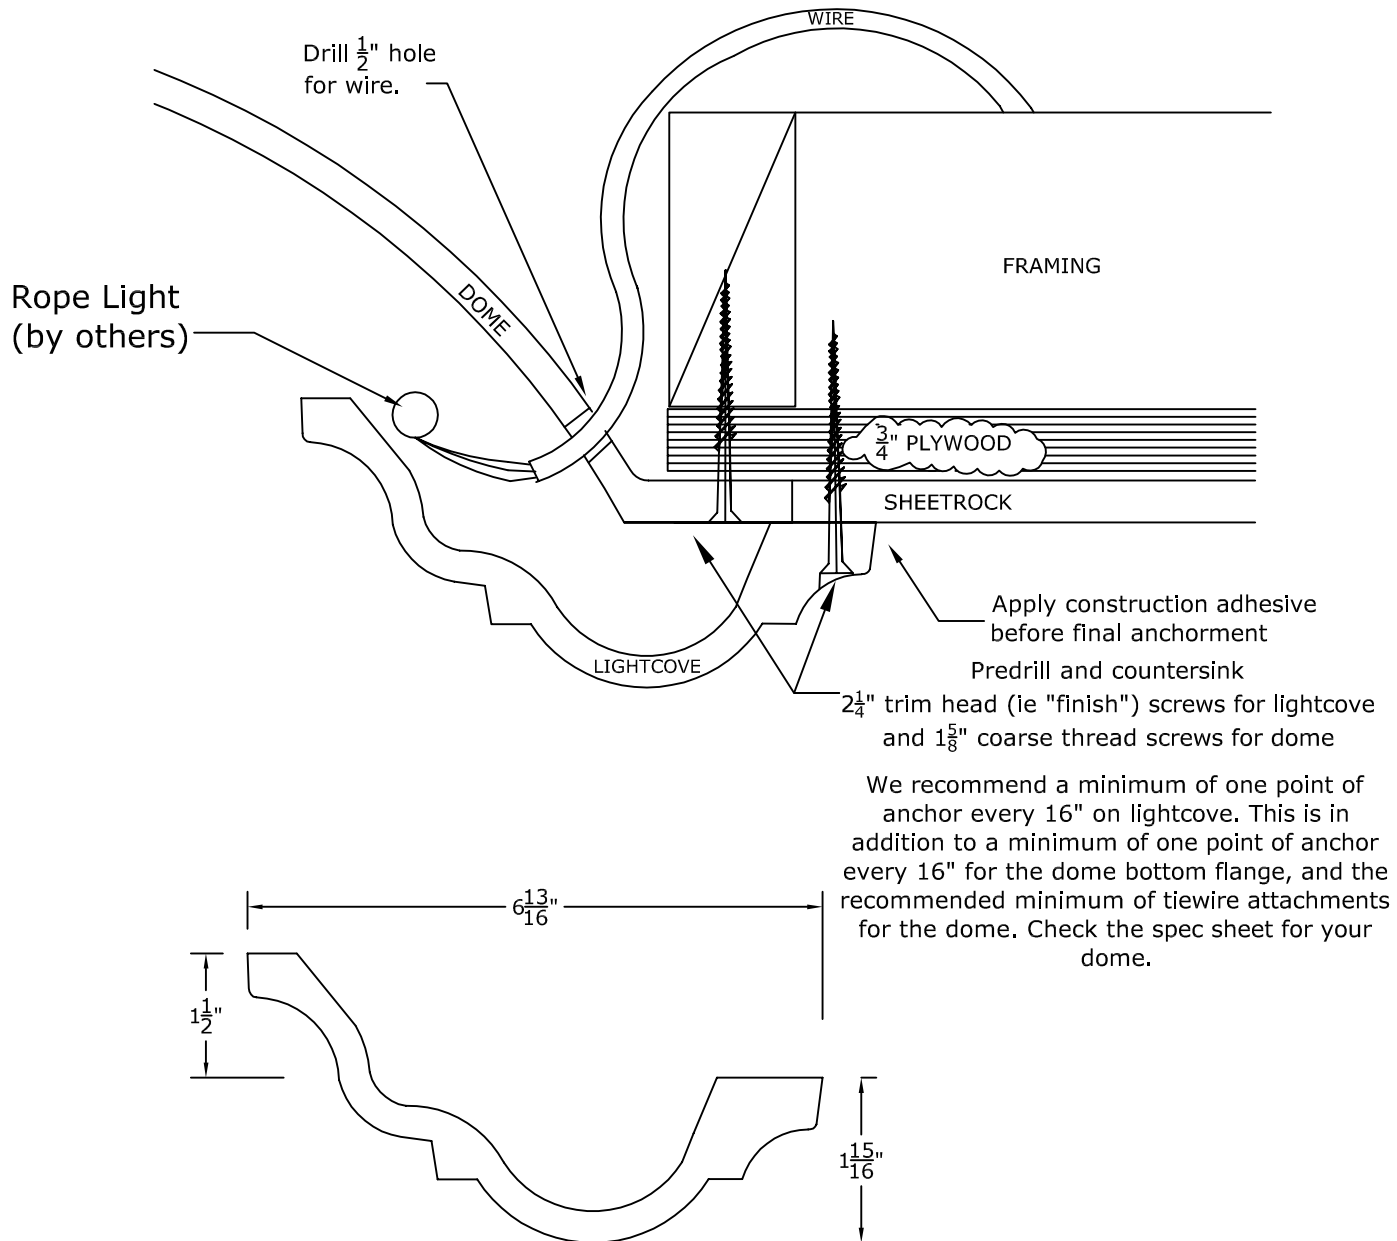




RWM Inc.


6419 South Cottonwood Street, Murray, Utah 84107
 Phone: 801-268-2400 Toll Free: 1-855-RWM-ARTS (796-2787)
 Fax: 801-268-2522 E-mail: info@rwm-inc.com

Visit our website at www.rwm-inc.com

Larger Traditional Lightcove: For Select Larger Domes

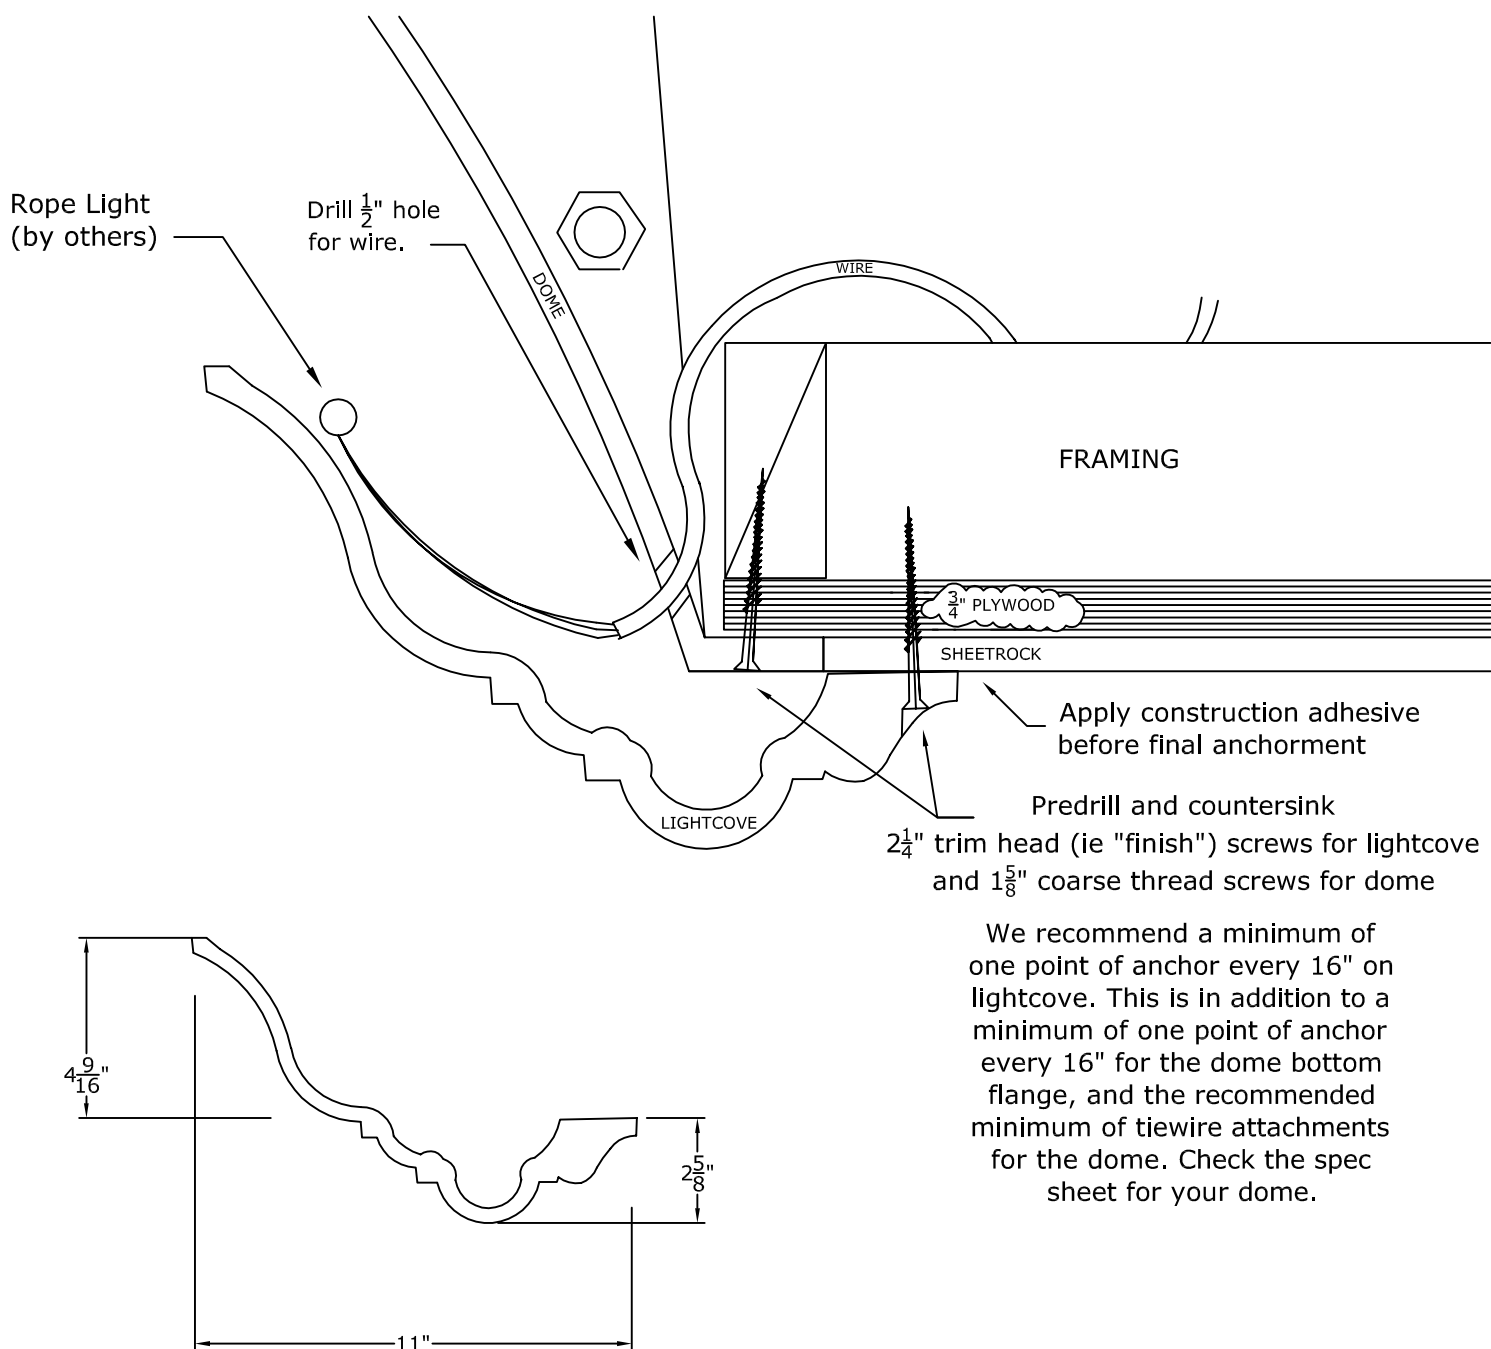

We recommend a minimum of one point of anchor every 16" on lightcove. This is in addition to a minimum of one point of anchor every 16" for the dome bottom flange, and the recommended minimum of tiewire attachments for the dome. Check the spec sheet for your dome.

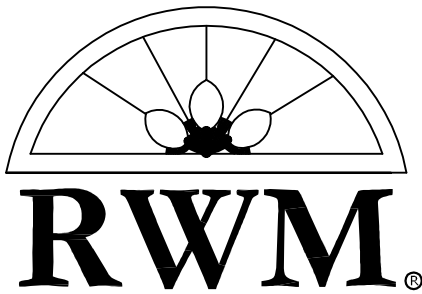


© Copyright 2017

RWM Inc.


6419 South Cottonwood Street, Murray, Utah 84107
 Phone: 801-268-2400 Toll Free: 1-855-RWM-ARTS (796-2787)
 Fax: 801-268-2522 E-mail: info@rwm-inc.com


Visit our website at www.rwm-inc.com

Contemporary Lightcove: For Select Larger Domes

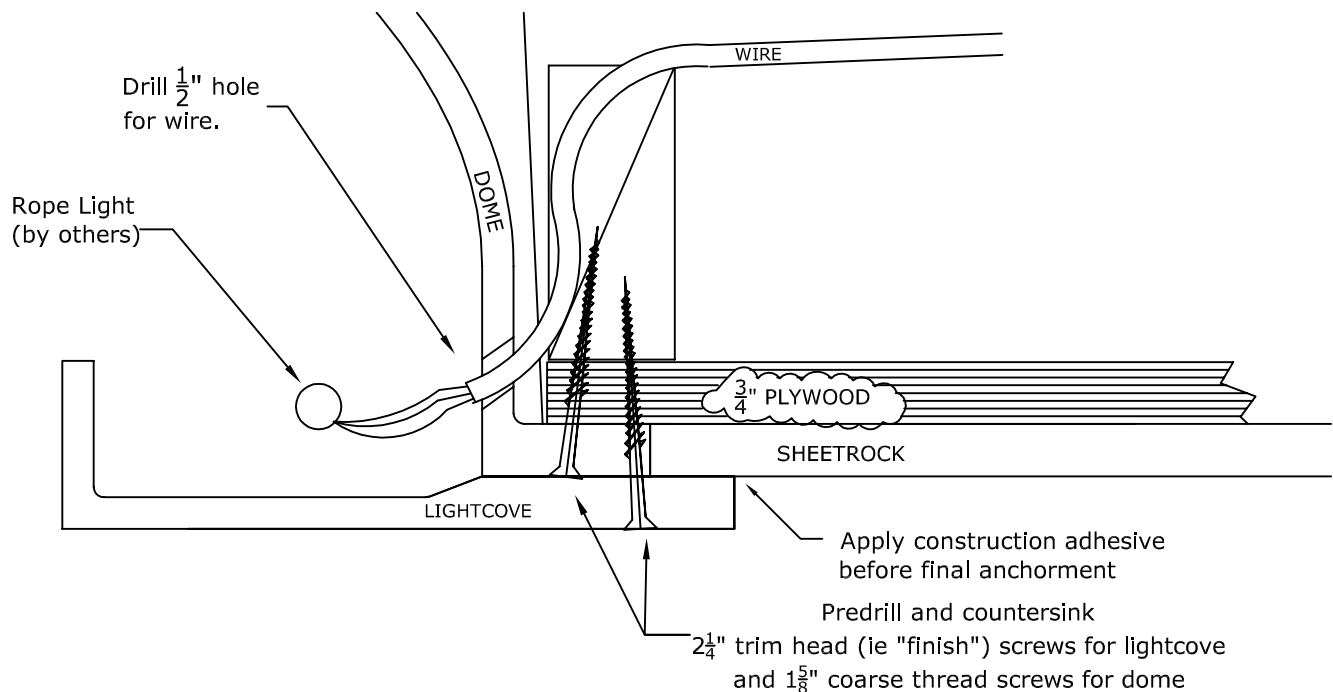

We recommend a minimum of one point of anchor every 16" on lightcove. This is in addition to a minimum of one point of anchor every 16" for the dome bottom flange, and the recommended minimum of tie wire attachments for the dome. Check the spec sheet for your dome.

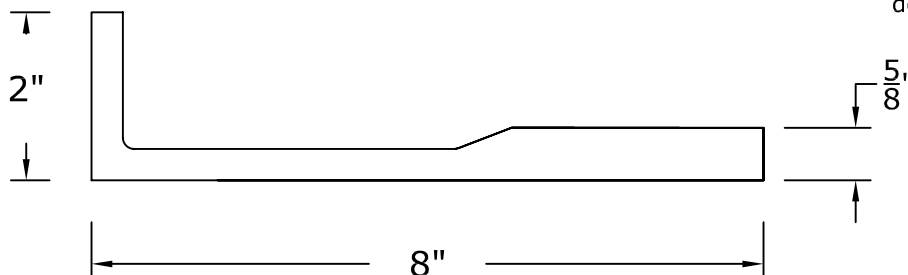

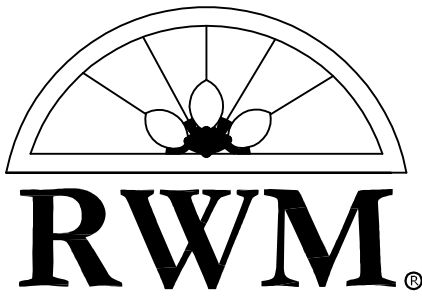


© Copyright 2018

RWM Inc.


6419 South Cottonwood Street, Murray, Utah 84107
 Phone: 801-268-2400 Toll Free: 1-855-RWM-ARTS (796-2787)
 Fax: 801-268-2522 E-mail: info@rwm-inc.com


Visit our website at www.rwm-inc.com

Larger Coin Lightcove: For Select Larger Domes

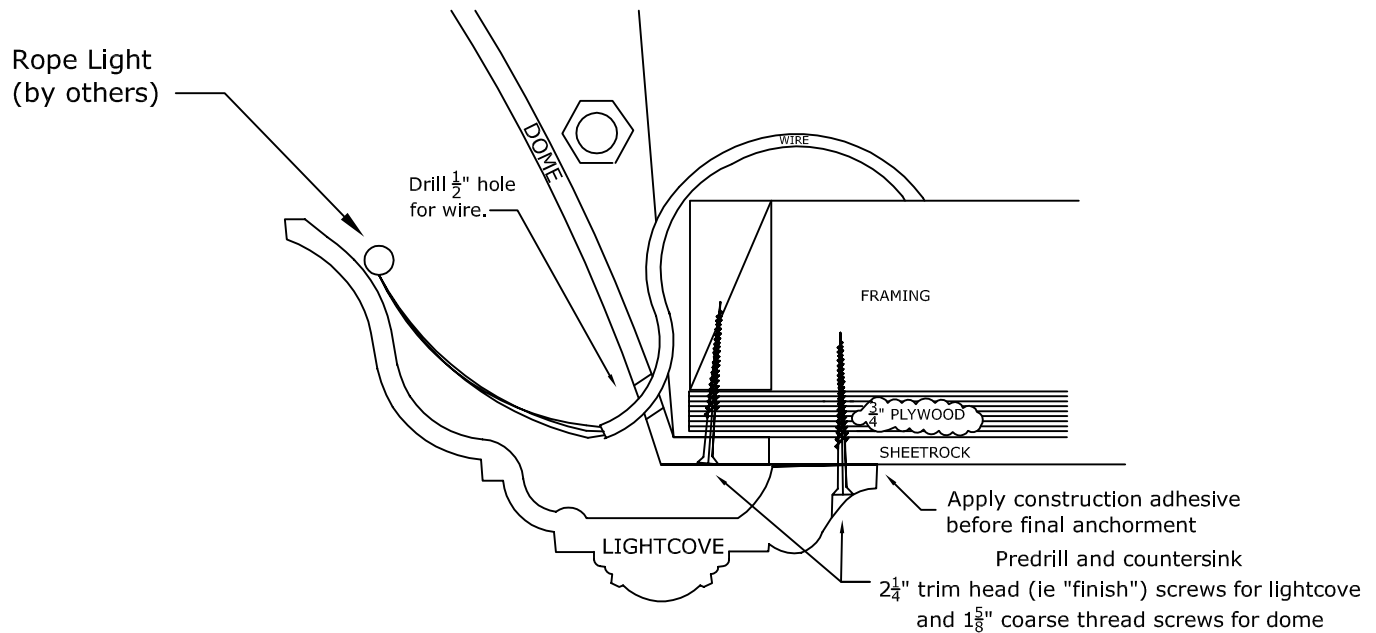

We recommend a minimum of one point of anchor every 16" on lightcove. This is in addition to a minimum of one point of anchor every 16" for the dome bottom flange, and the recommended minimum of tie wire attachments for the dome. Check the spec sheet for your dome.

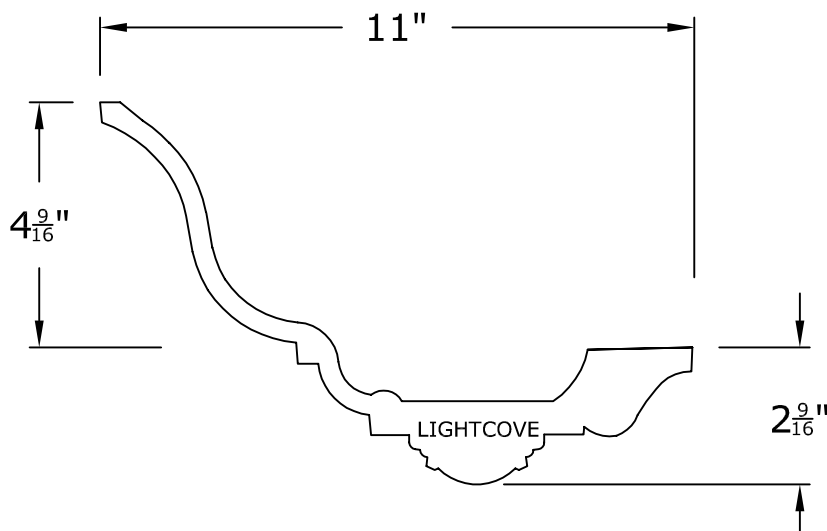

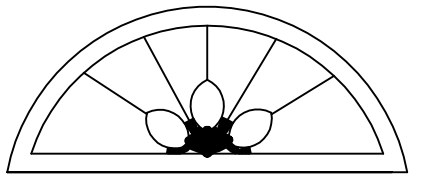

RWM®

© Copyright 2018

RWM Inc.


6419 South Cottonwood Street, Murray, Utah 84107

Phone: 801-268-2400 Toll Free: 1-855-RWM-ARTS (796-2787)

Fax: 801-268-2522 E-mail: info@rwm-inc.com

Visit our website at www.rwm-inc.com

Larger Acanthus & Pearl Lightcove: For Select Larger Domes

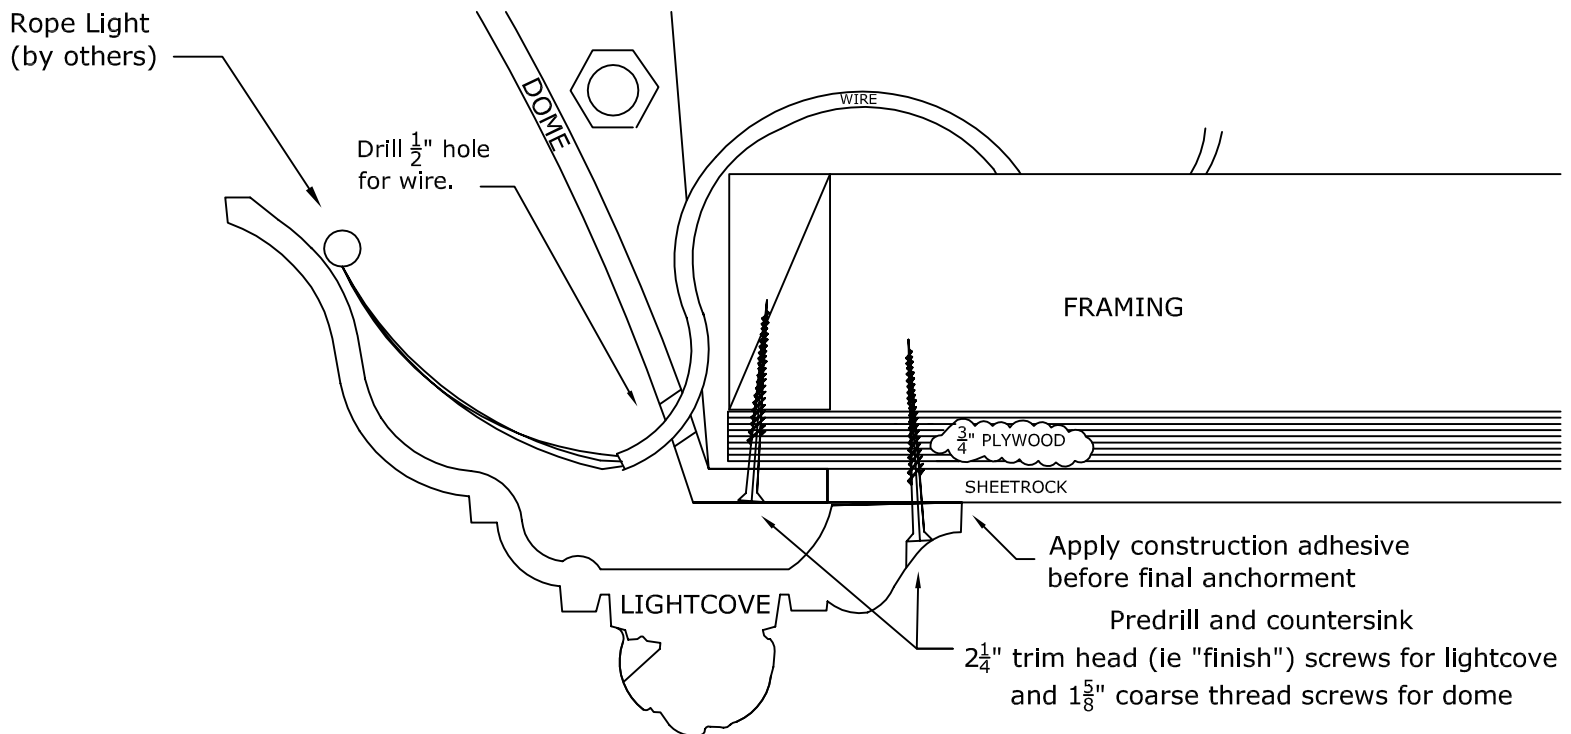

We recommend a minimum of one point of anchor every 16" on lightcove. This is in addition to a minimum of one point of anchor every 16" for the dome bottom flange, and the recommended minimum of tiewire attachments for the dome. Check the spec sheet for your dome.

