


RWM Inc.

6419 South Cottonwood Street, Murray, Utah 84107 Phone: 801-268-2400 Toll Free: 1-855-RWM-ARTS (796-2787)

Fax: 801-268-2522 E-mail: info@rwm-inc.com


Visit our website at www.rwm-inc.com

French Curve Seat: For Partially-Recessed Niche

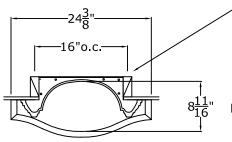



Place 2 x 4 backing between studs $\frac{5}{8}$ " lower than desired finish seat height. Glue to backing and screw behind finish line of niche.

peak depth of shelf

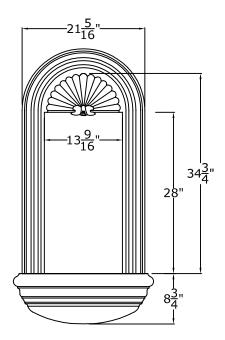

Clamshell

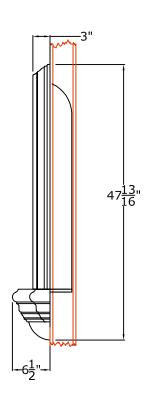

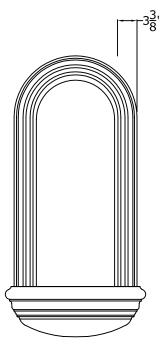

Smooth